




1.Go to Insert-->Design feature-->Pocket

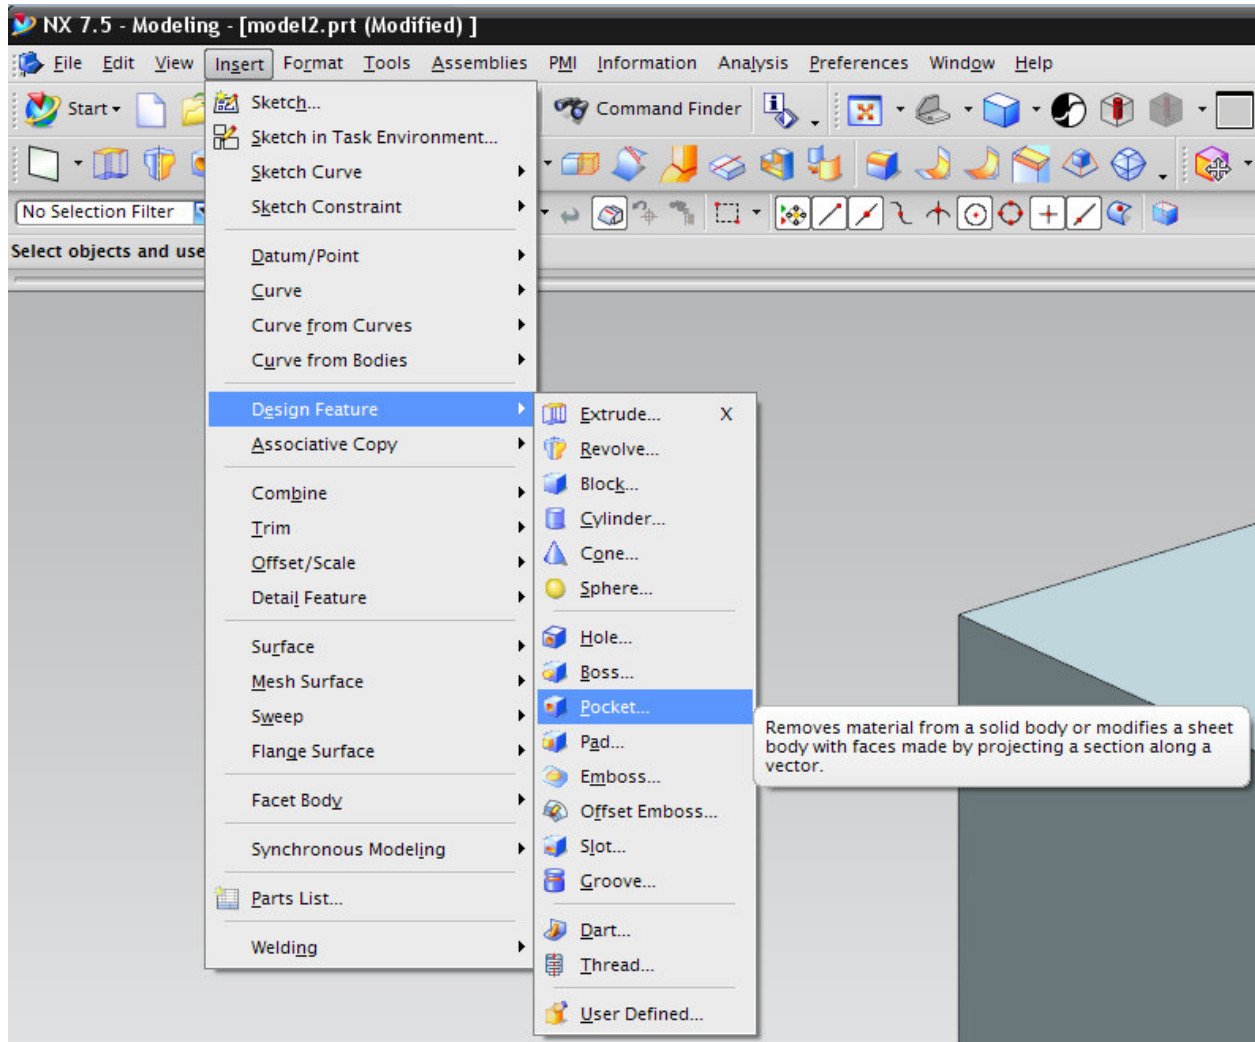


2.Pocket window

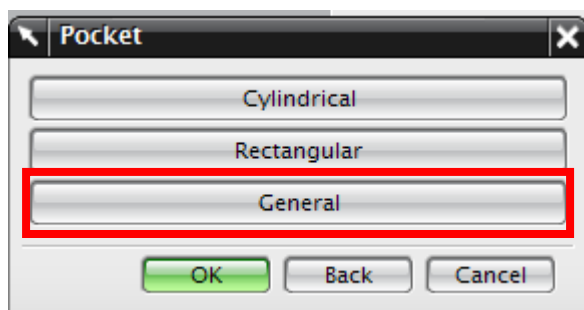



3. Select Placement face

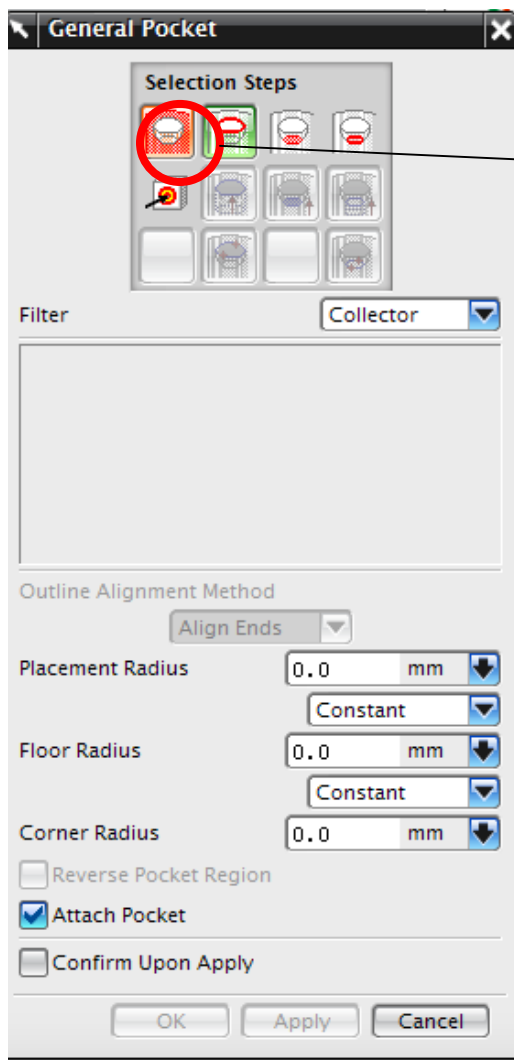



placement face

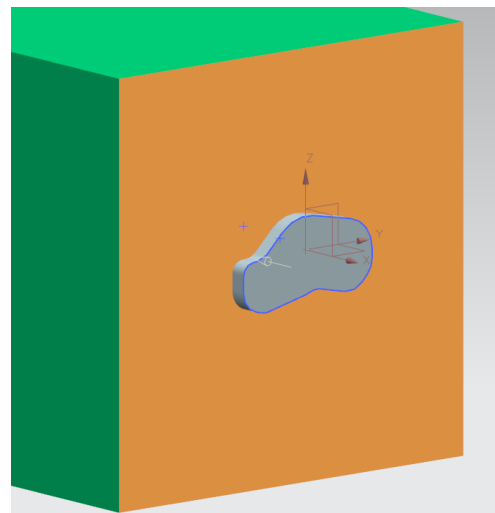

4. Select out line curves

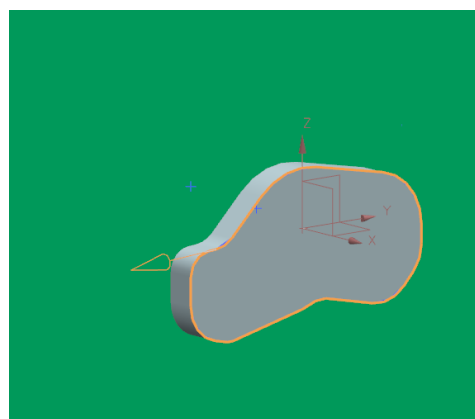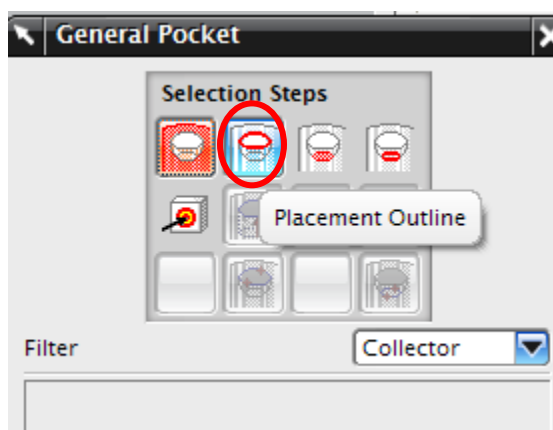

5. Select Floor Face and give offset distance

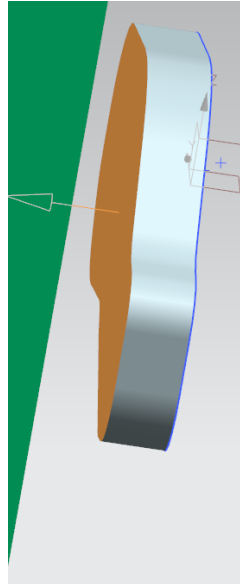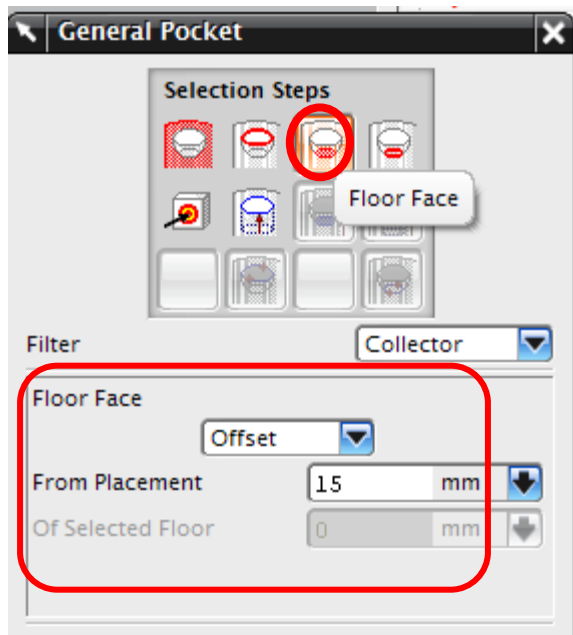

6. Click apply

